



Installation manual

Stroller shed 4pc

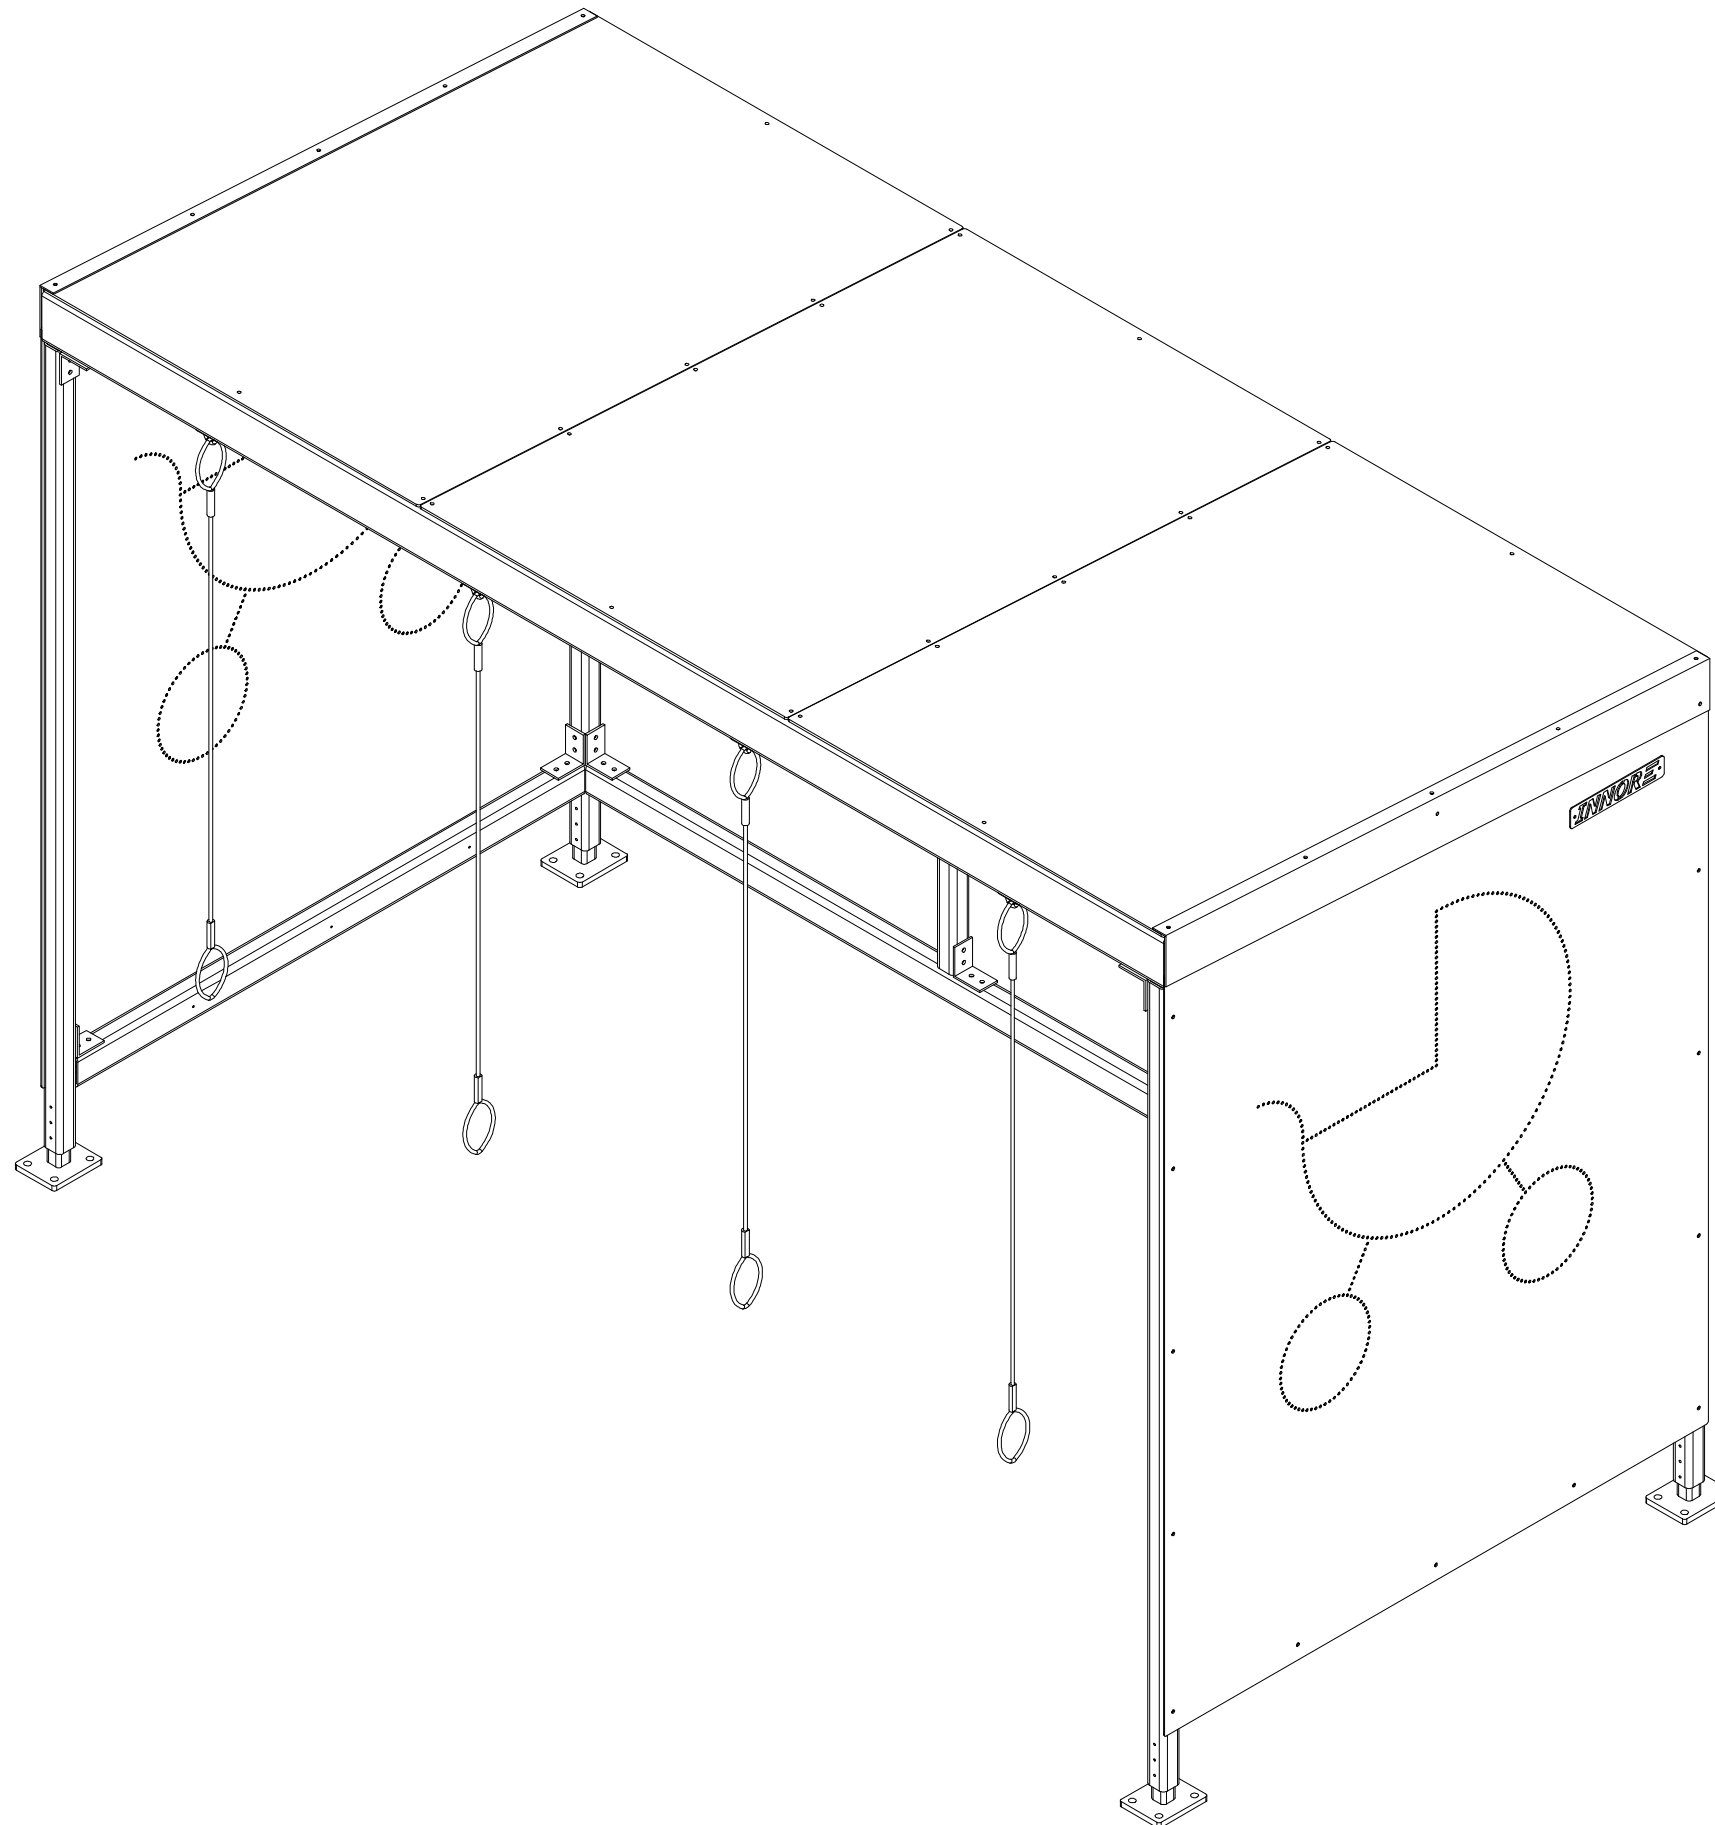


Parts overview


Condensate/
drainage holes are
always at the back.

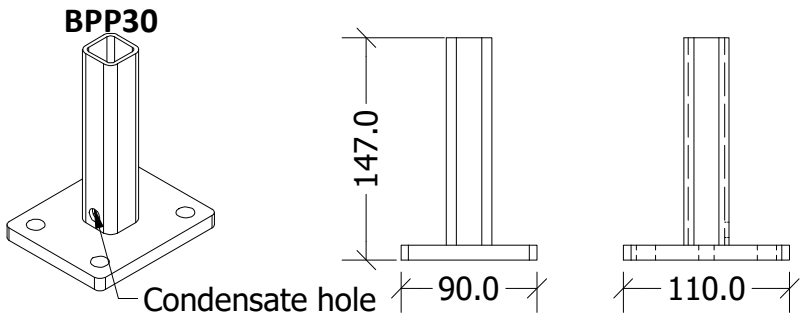

BPP30 - Baseplate and 30x30x3 welded together and powder coated

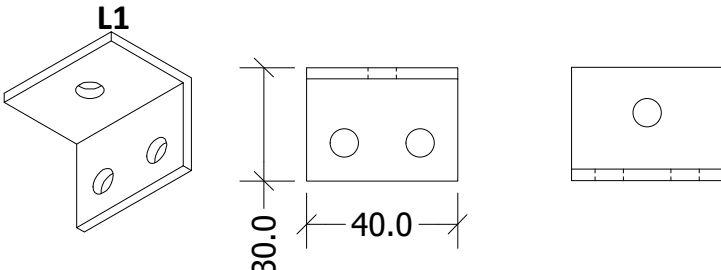

L1 - 40x30x30x3 bracket

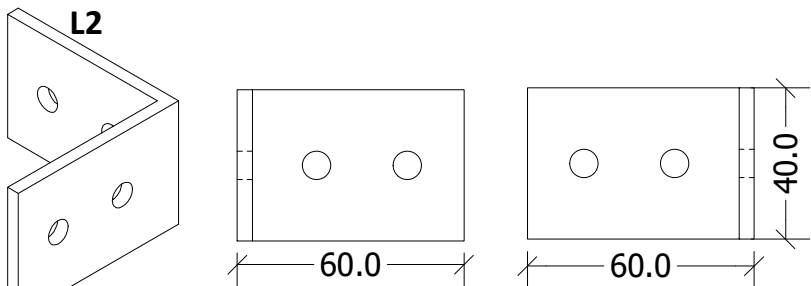


L2 - 60x60x40x4 bracket




Oval plate with a loop that has 1 rope loop connected to it and second loop is for securing strollers




Ruukki LP Torx - 4.8x28 ZYTEC M. RR23




Teemu self-drilling 4.8x19 screw for fastening oval plates with loops to beam




Timber screw - 10x120 WAF/Tx CorrSeal CE



Screw anchor - HUS4-HF 10x100 45/25/15




Würth self-drilling screw 6.3x19
Profiles connection by angles + 30x30x3
connection to 40x40x4













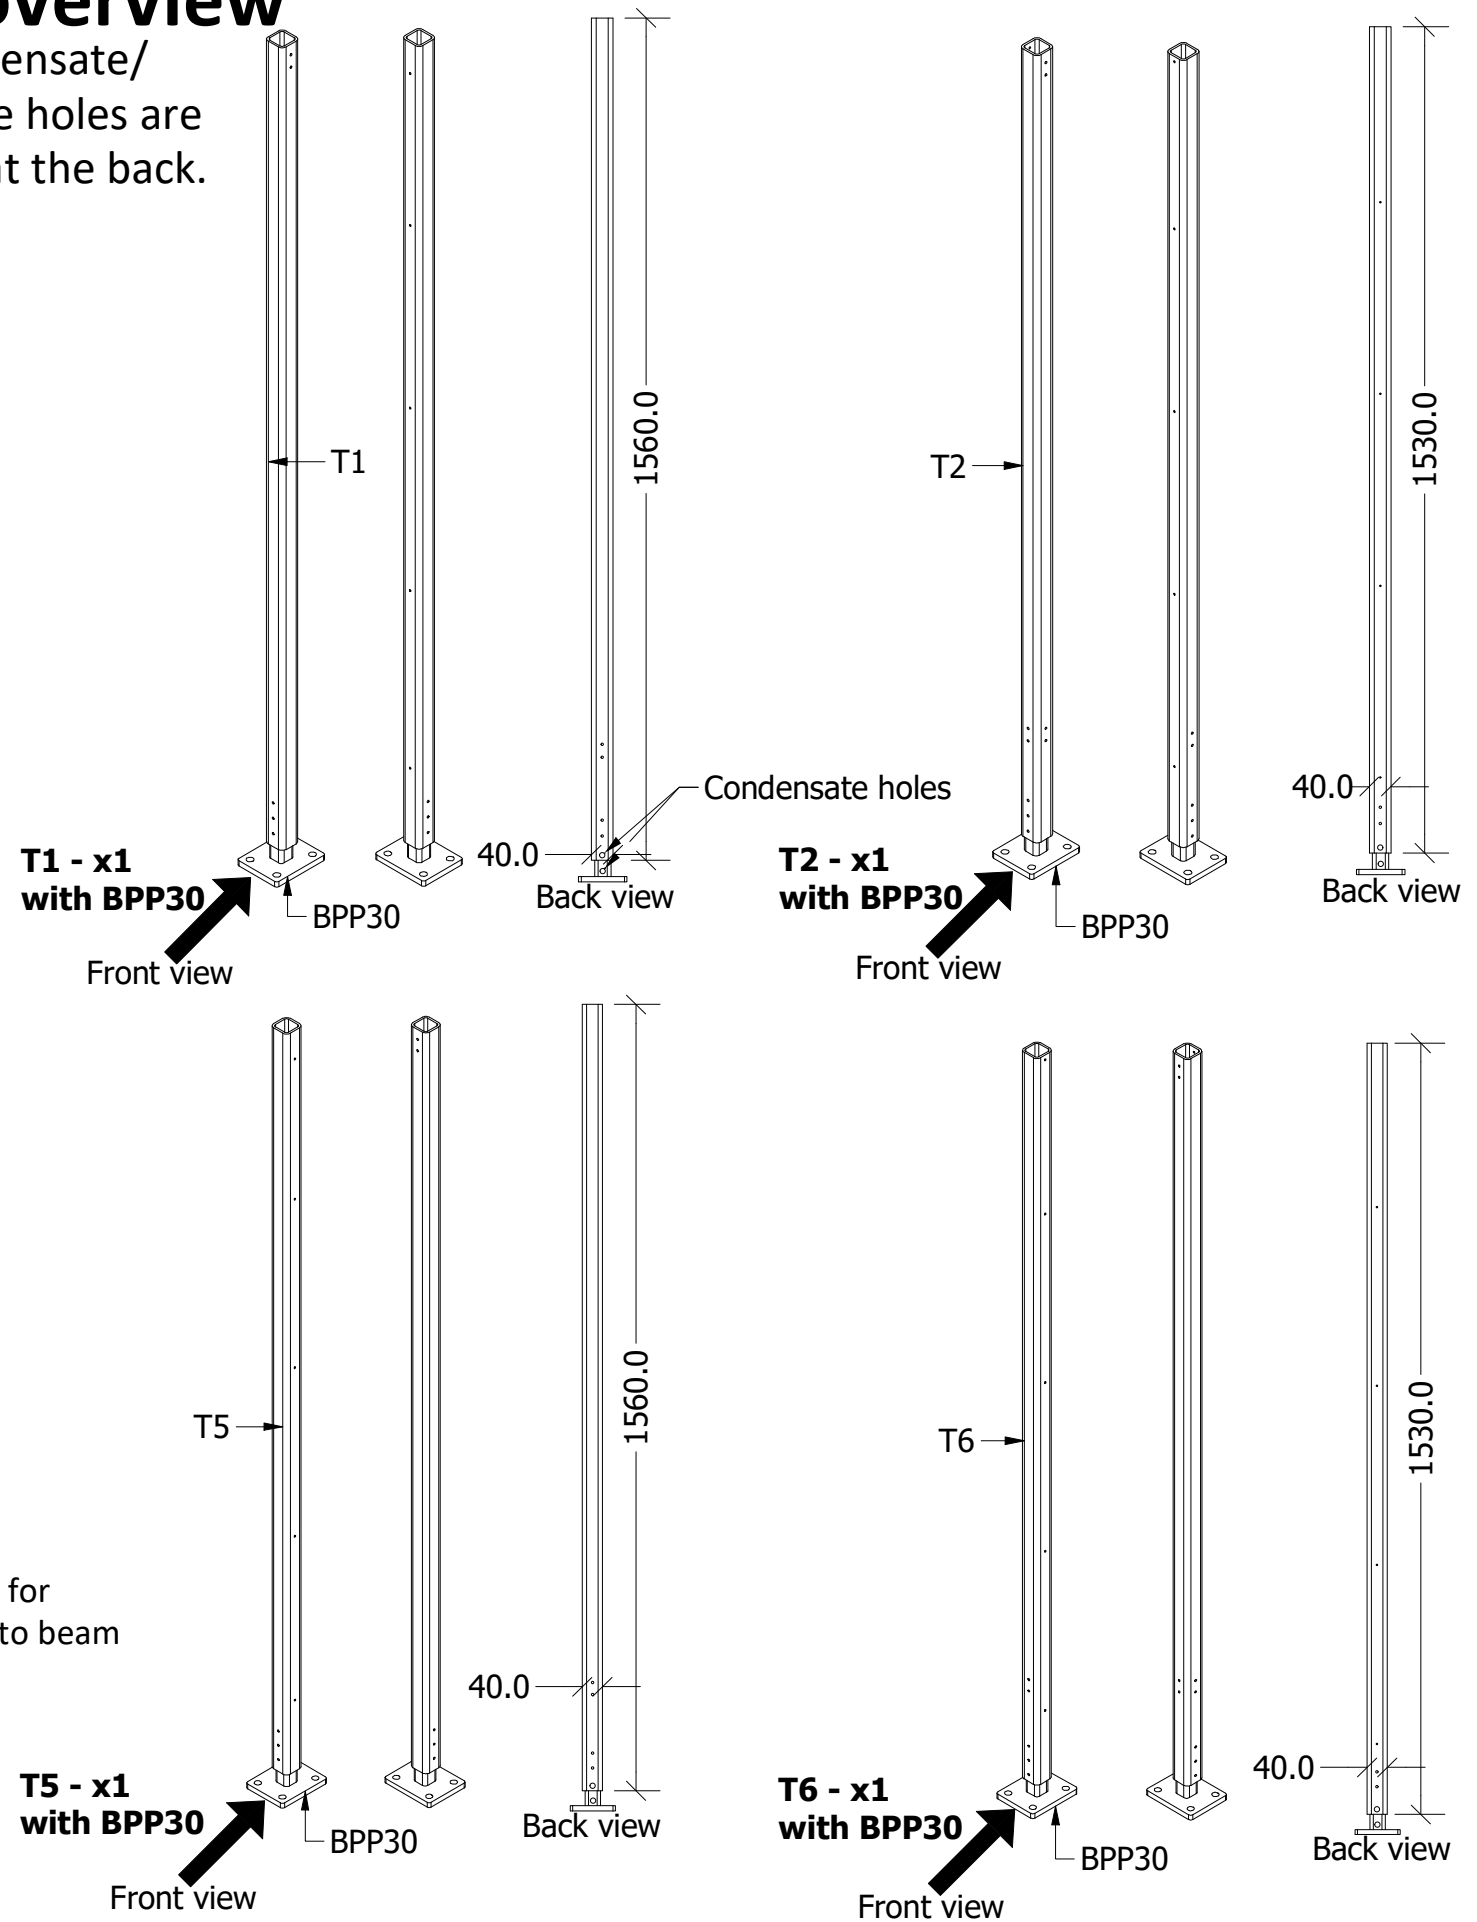


Parts overview

Use the hole pattern to identify the correct profile orientation.



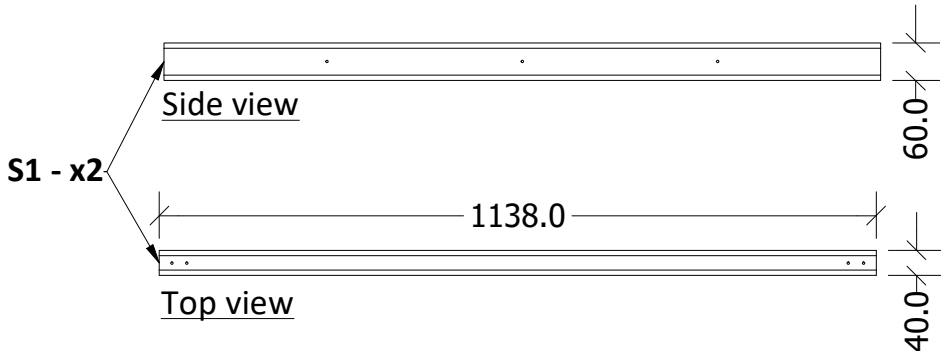


Right and left side view holes are positioned the same, so are the holes on top view. It does not matter which way you put this profile as long as top is top.

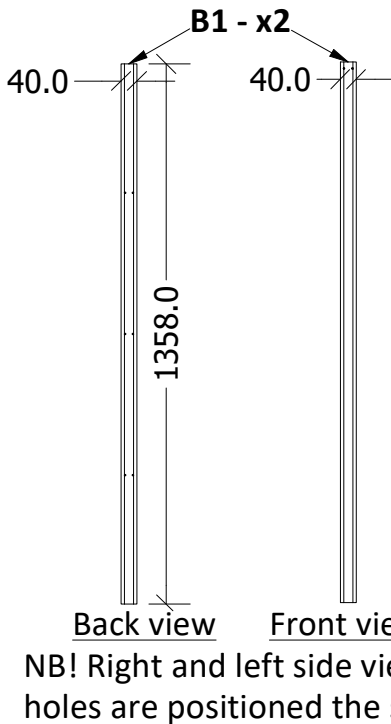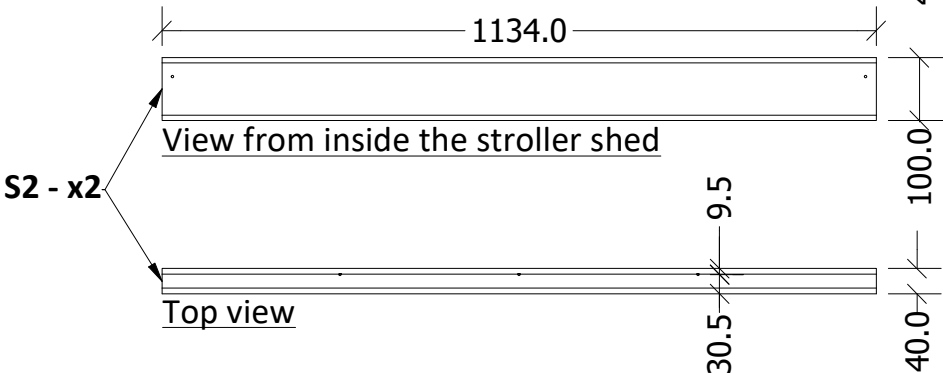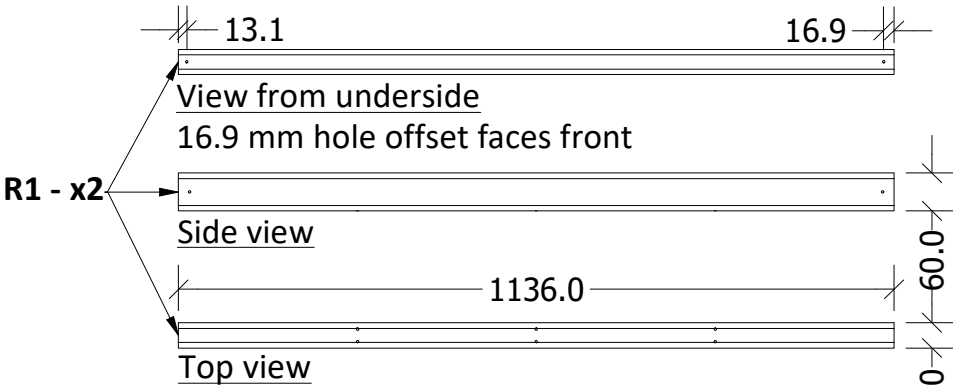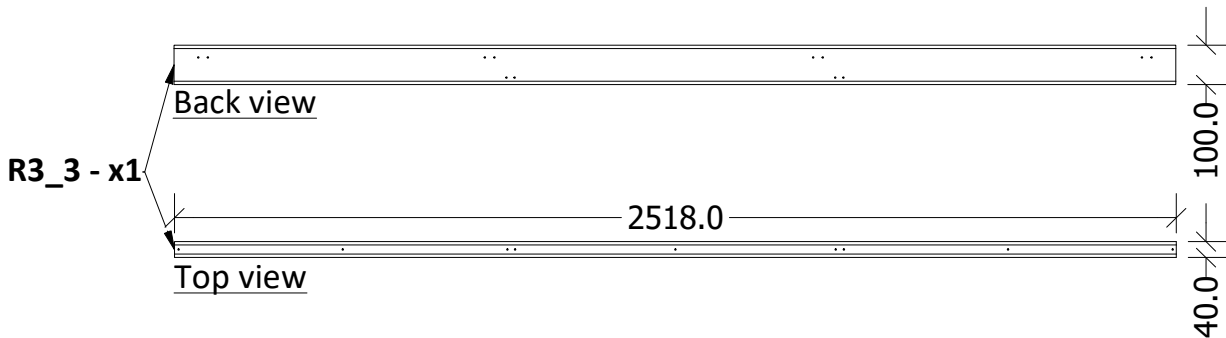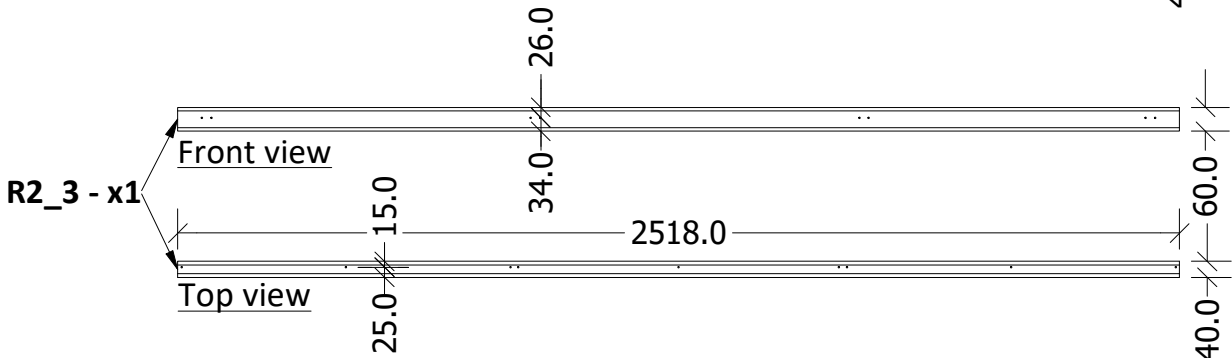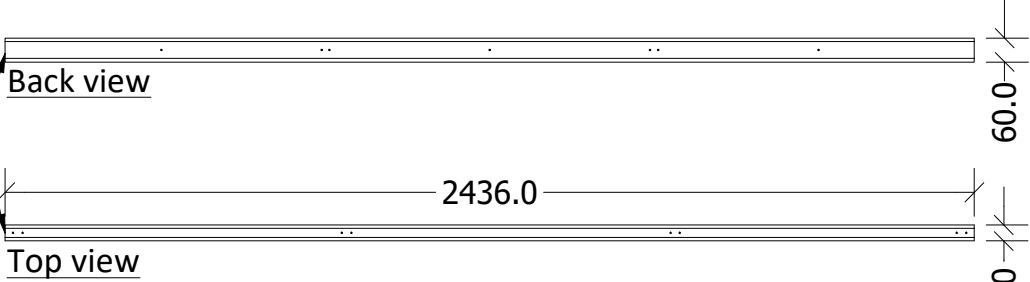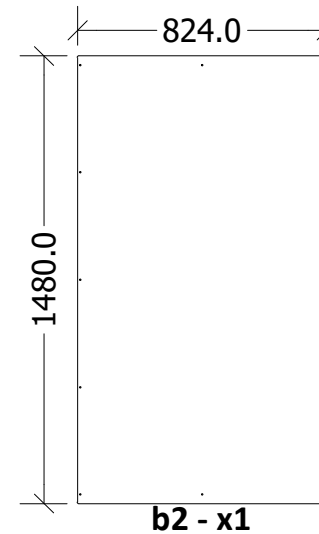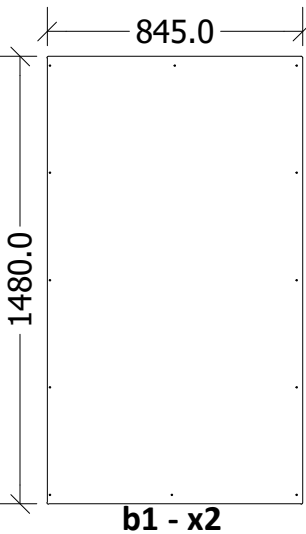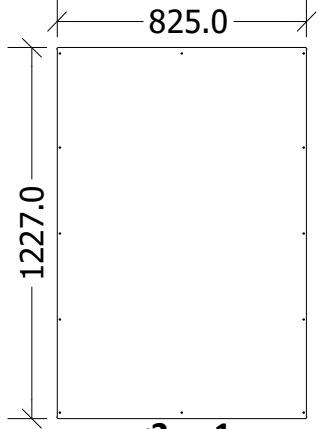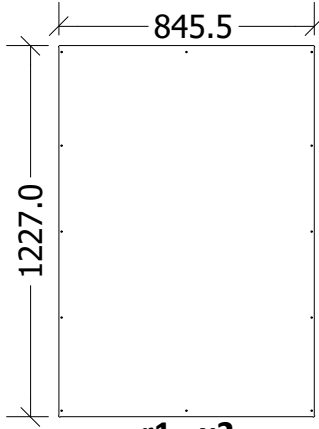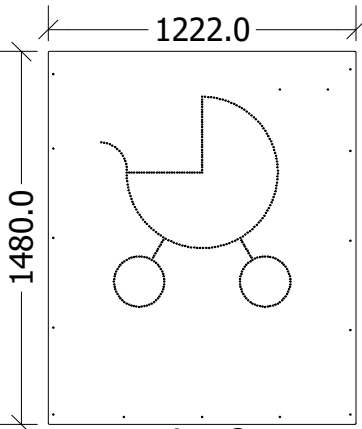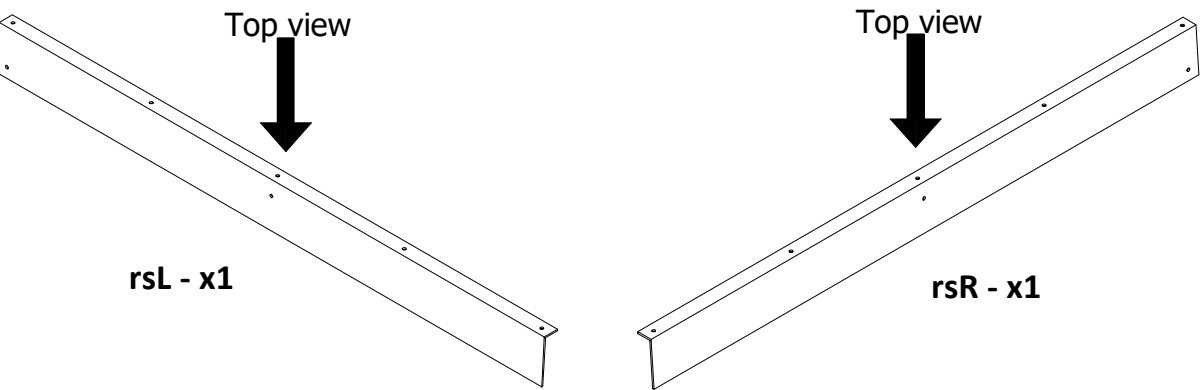


PRODUCT:	SHEET NAME: BARNEVOGNSKUR 4pc		
DATE: 04.05.2026	PAGE: 3	VERSION: 1	FORMAT: A3

- 1. All profiles lasercut.
- 2. NB! Most profiles and plates are 1-2mm shorter as aluminium thermal expansion comes into effect.
- 3. Plates connected to ground using only 2 diagonal plate holes instead of all 4 when using concrete screws. Fix timber screws to all 4 holes when fixing to timber or asphalt.
- 4. NB! Water outlet in 30x30x3 and 40x40x4 is oriented at the back so it is not visible from front.

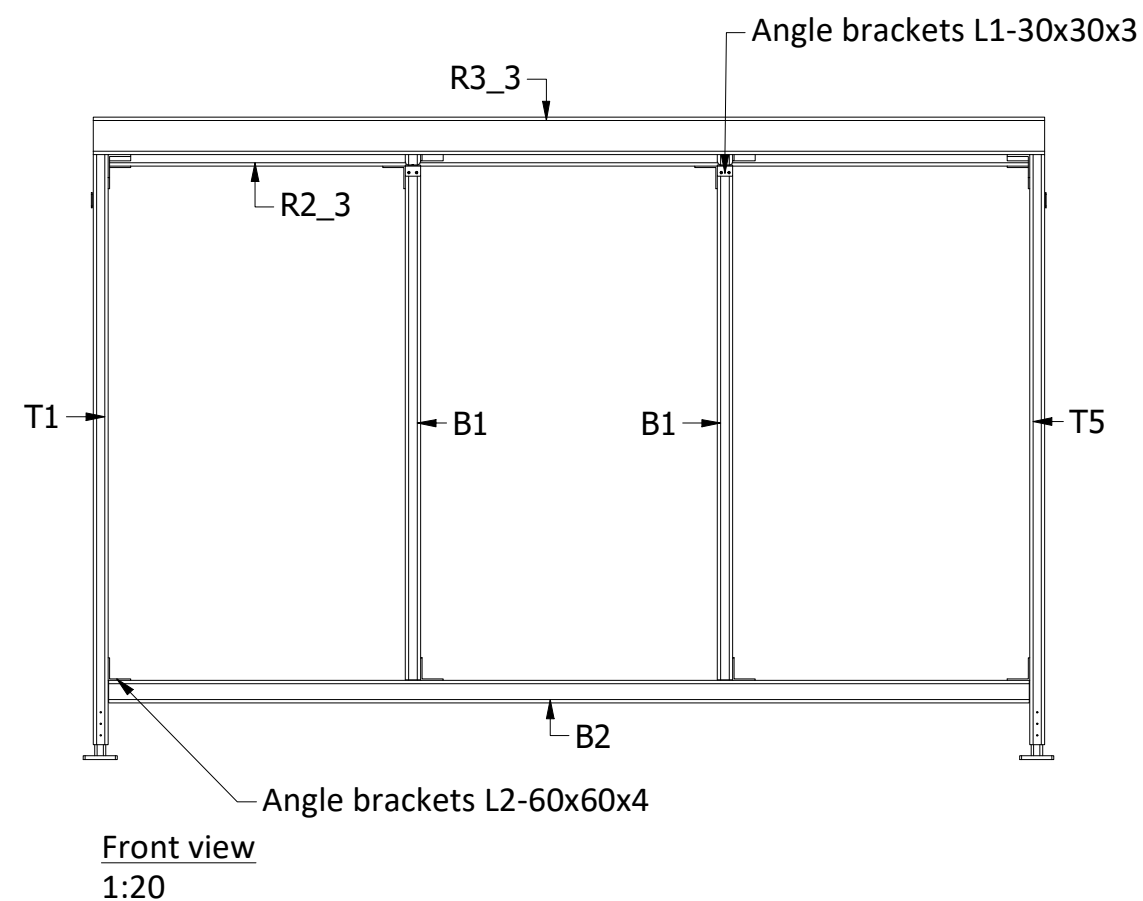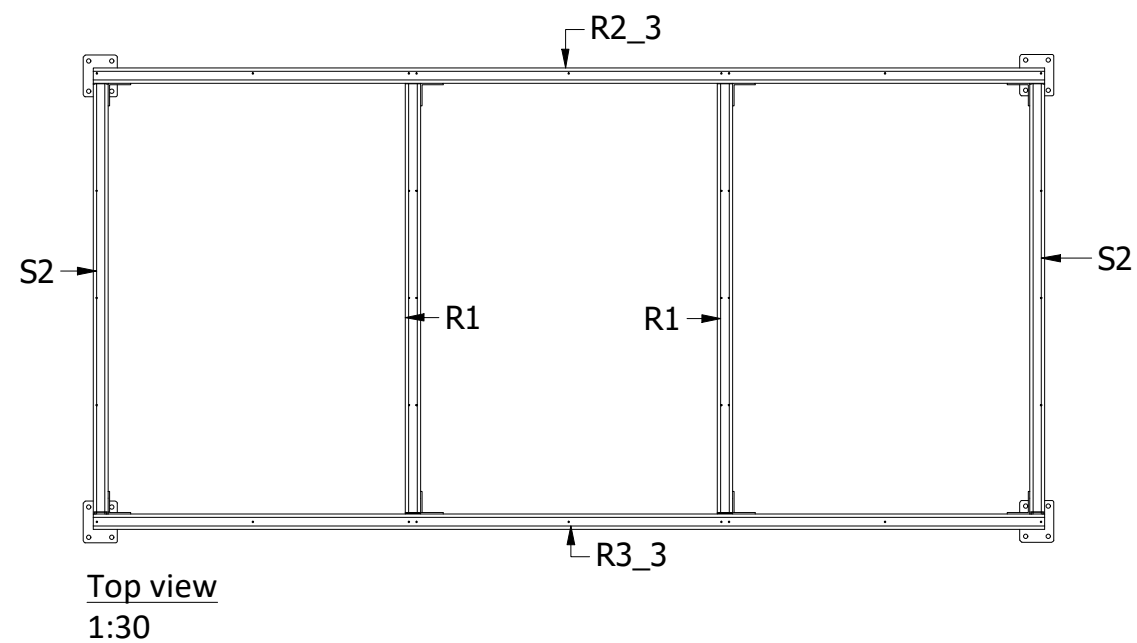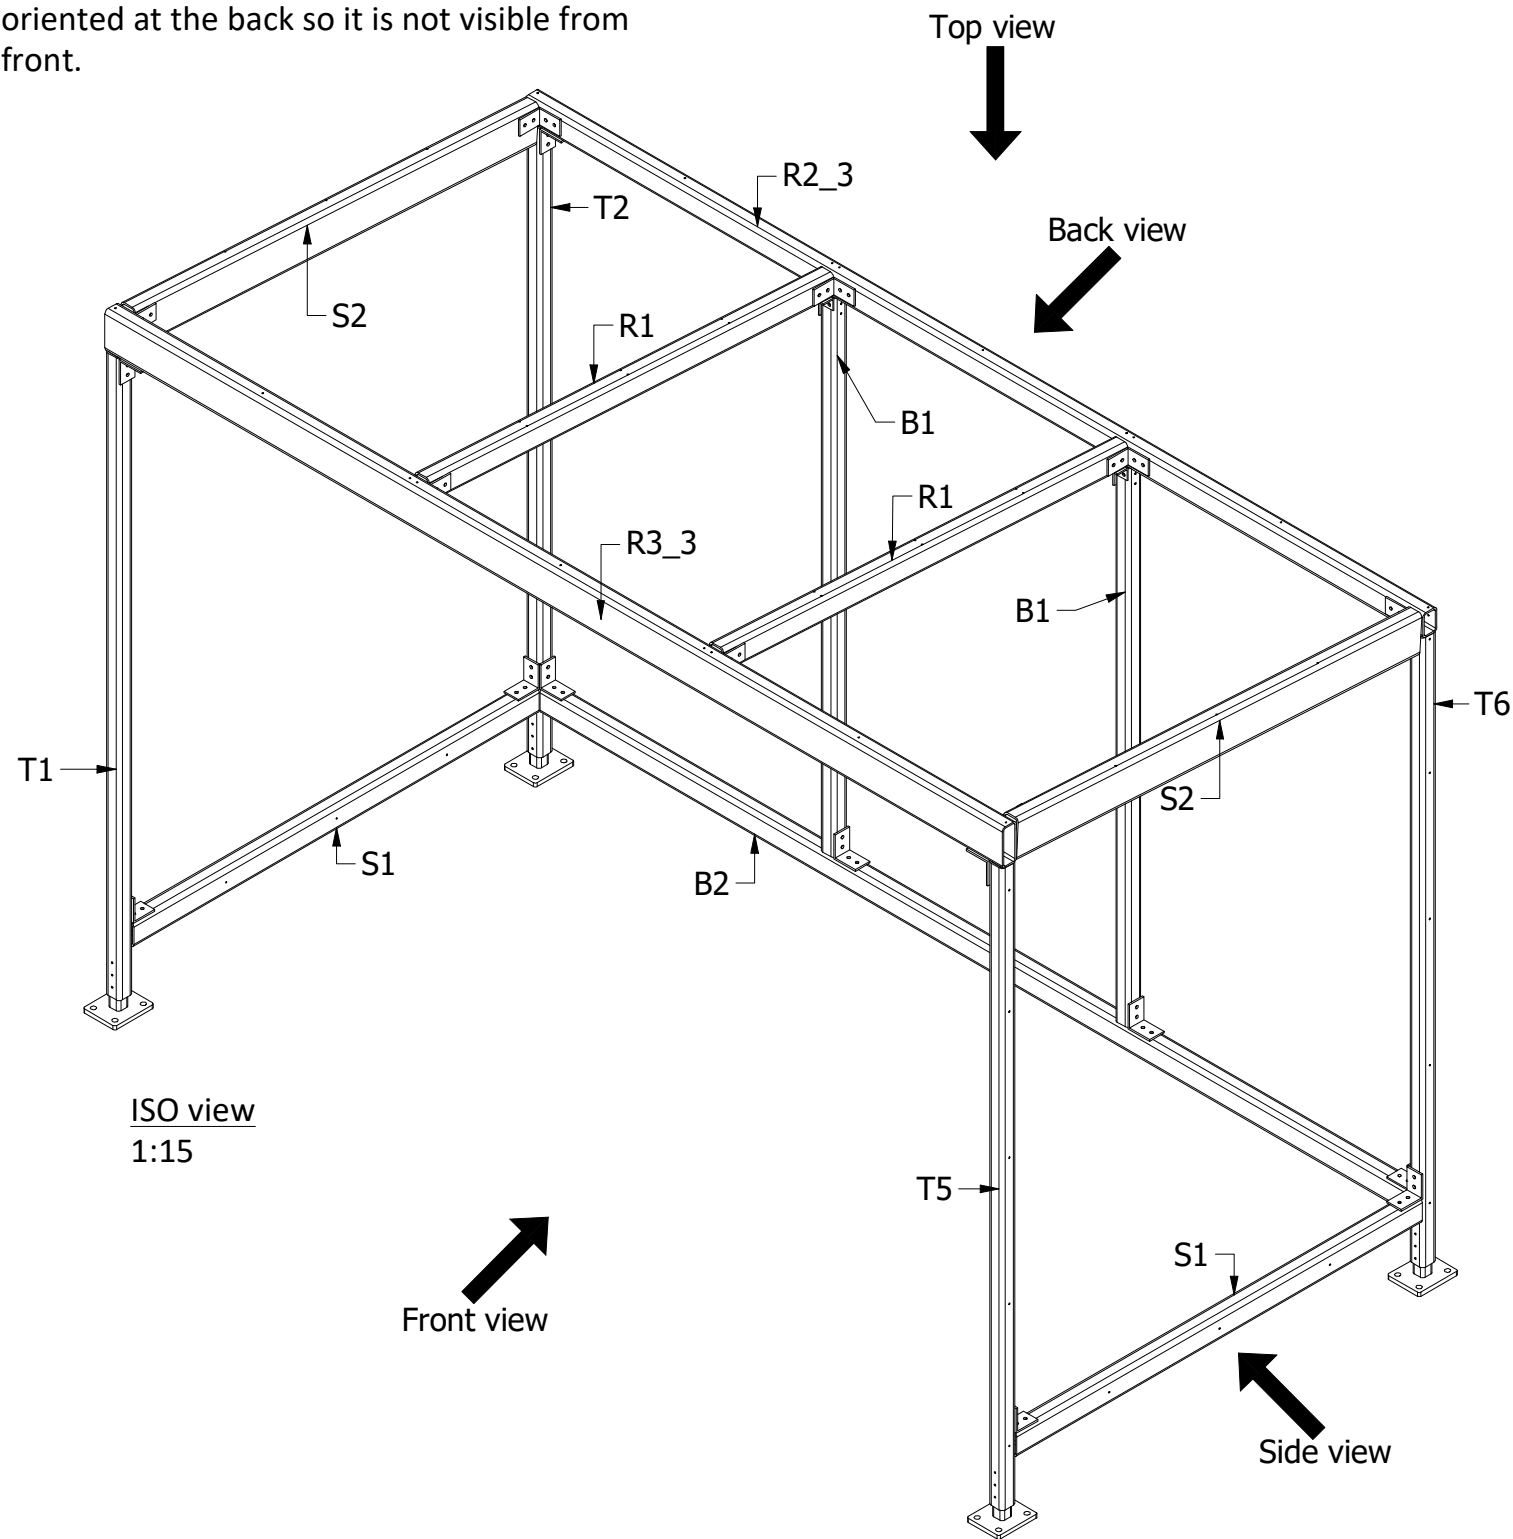


BPP30


30x30x3 is welded to baseplate. T1, T2, T5, T6 (40x40x4) profiles go over 30x30x3.
40x40 is fastened with SD screws to 30x30 at the end, after leveling.

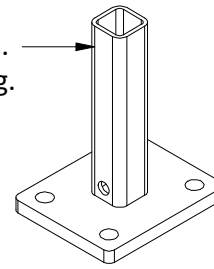


**Make sure holes for L1
brackets on B1 profiles face inside
and are at the top.**
L1 connection is shown on the next page.

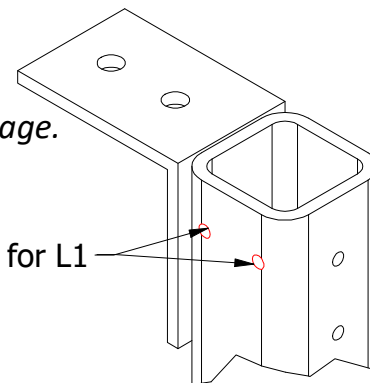


DETAIL E

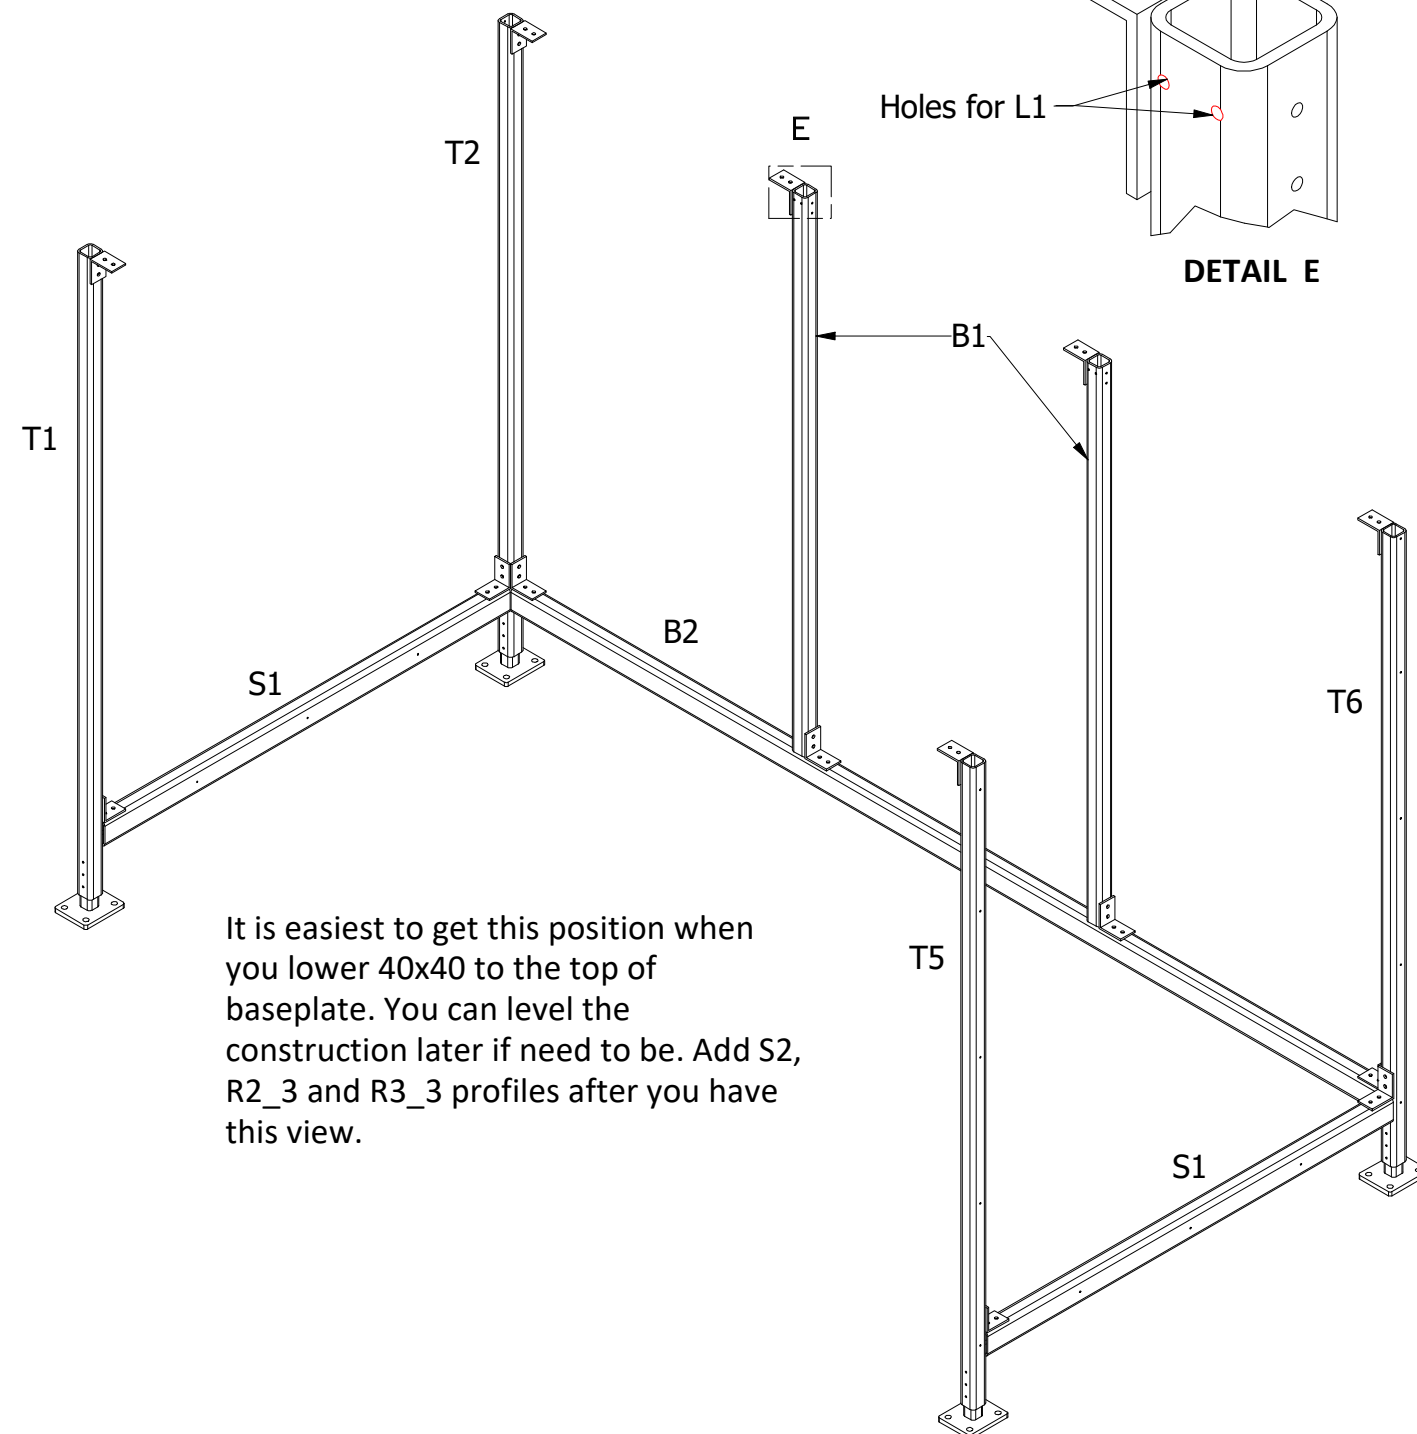

It is easiest to get this position when you lower 40x40 to the top of baseplate. You can level the construction later if need to be. Add S2, R2_3 and R3_3 profiles after you have this view.

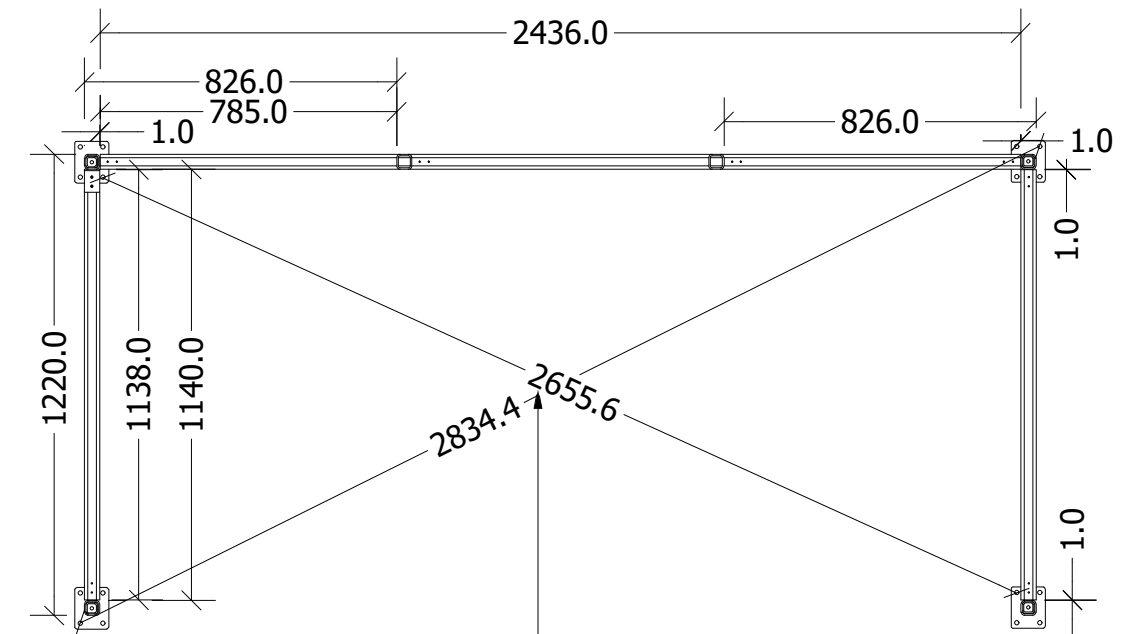

Depends a bit on how 40x40x4 profiles are placed over 30x30

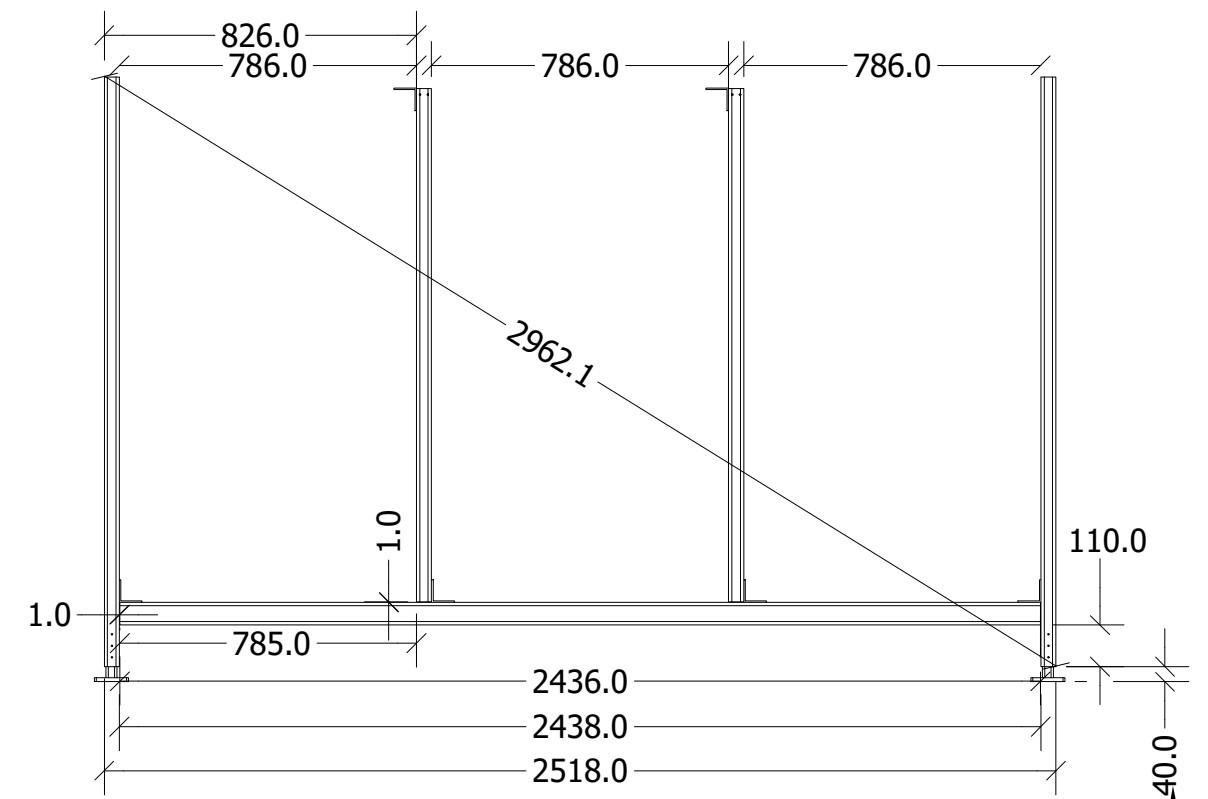

By default height from ground, subject to change with levelling.

INNOR

PRODUCT:

DATE: 04.05.2026


SHEET NAME:

BARNEVOGNSKUR 4pc

PAGE: 5


VERSION: 1

FORMAT: A3

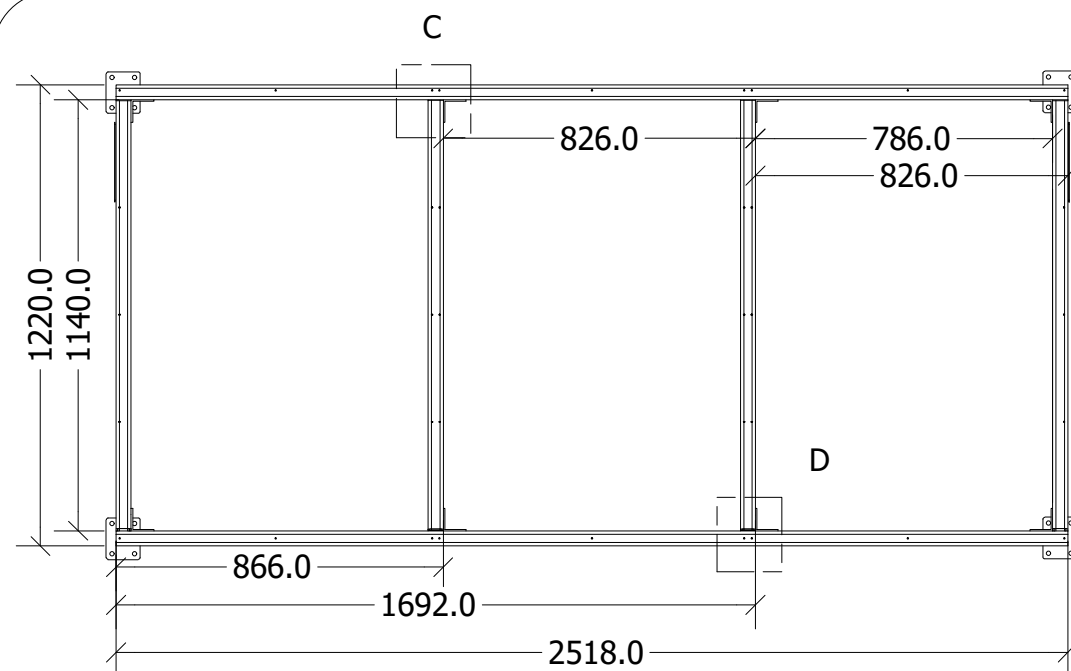


After adding R2_3 and R3_3 and S2 add angle brackets L1-30x30x3 under R1 for support.




Only then add R1 profiles and connect them by L2-60x60x4 brackets to other profiles.

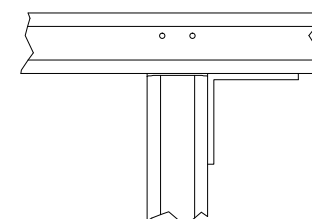



DETAIL C - L1
1:5

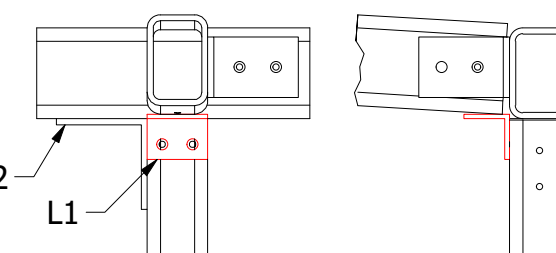

DETAIL D - L2
1:5

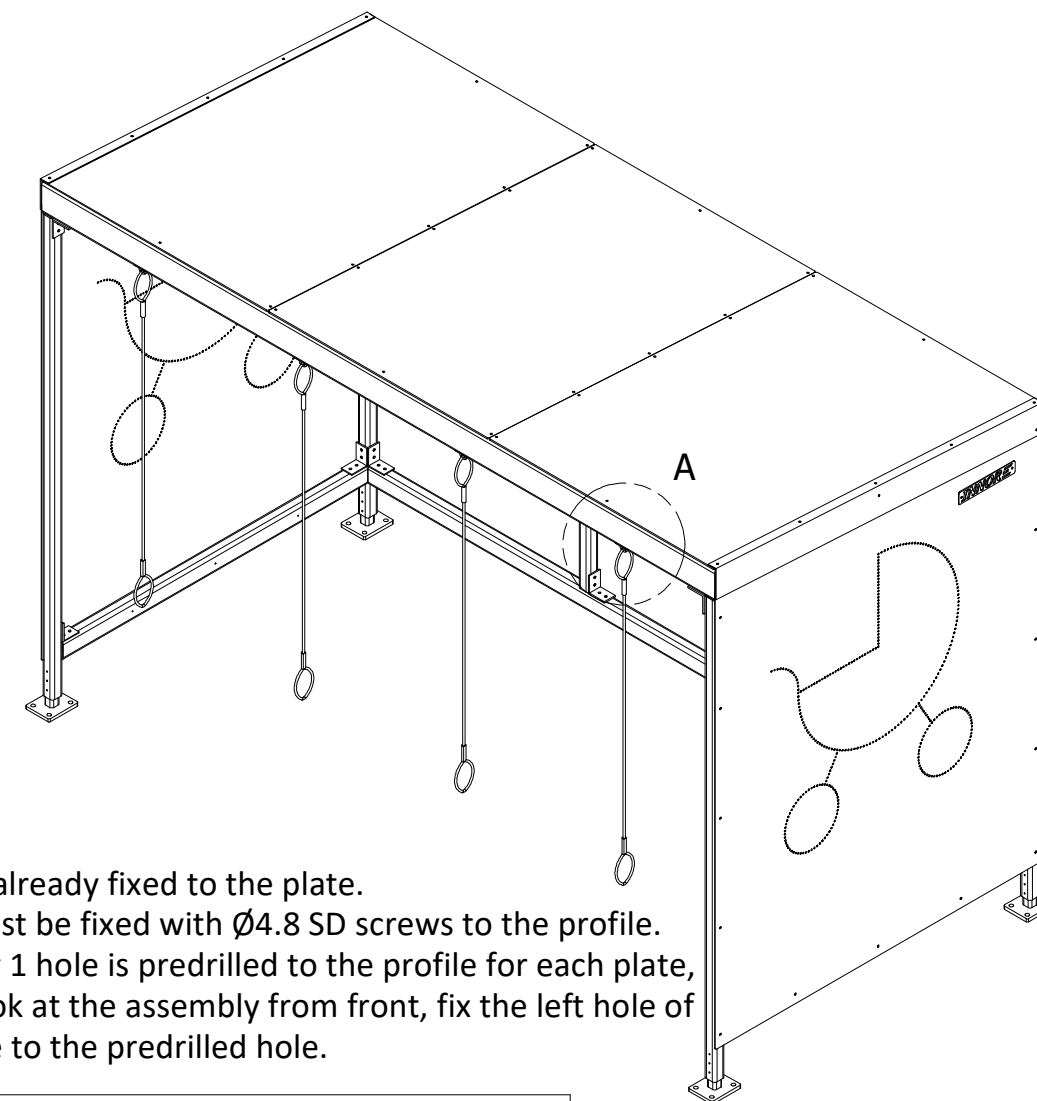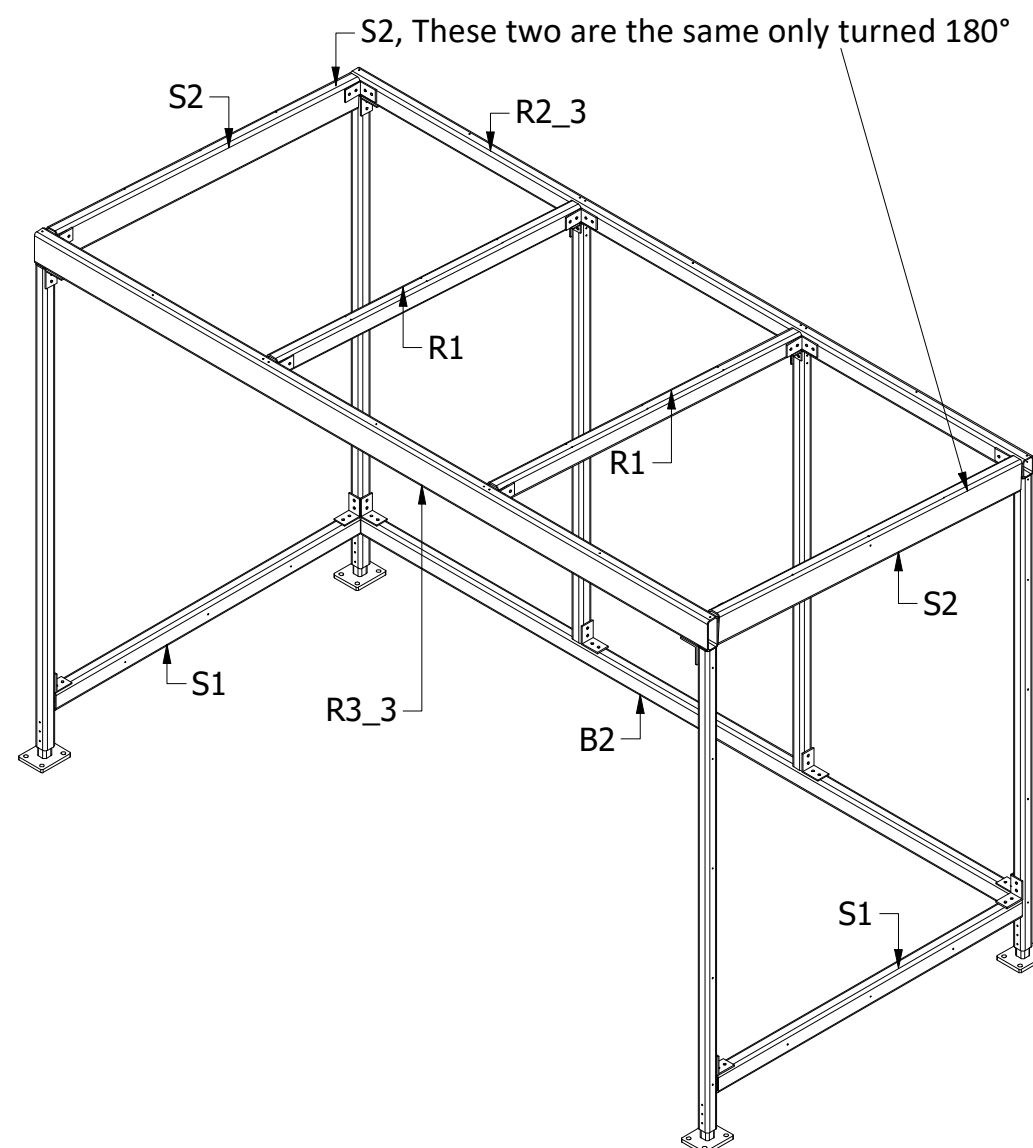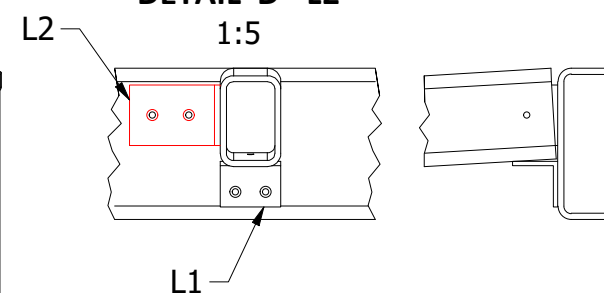



Cable is already fixed to the plate.
Plate must be fixed with $\varnothing 4.8$ SD screws to the profile.
NB! Only 1 hole is predrilled to the profile for each plate, if you look at the assembly from front, fix the left hole of the plate to the predrilled hole.

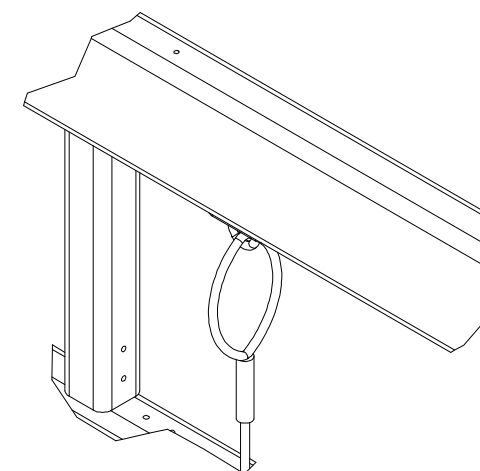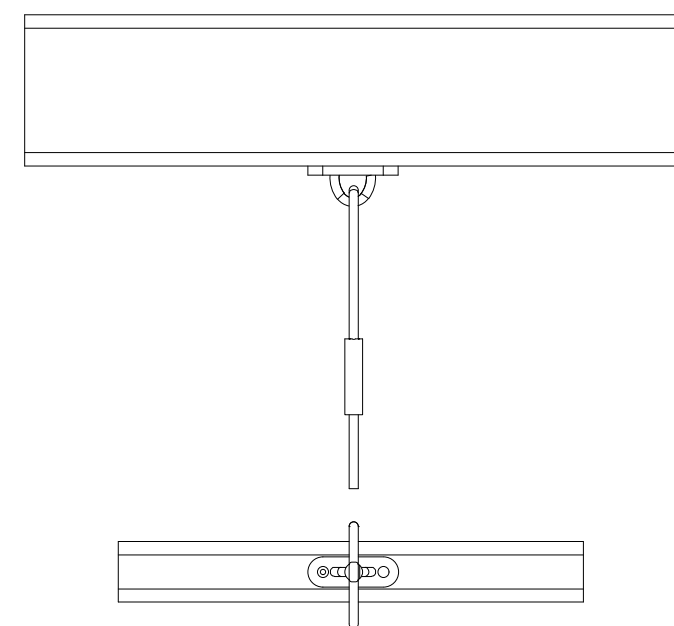

DETAIL A

Plates placement.


Fix the plates with $\varnothing 4.8 \times 28$ Ruukki SD screws.
 NB! It is recommended to use 30x30x3 profile with baseplate only for centering but if need to be it can be used as levelling tool: MAX 50mm from baseplate to the start of 40x40, otherwise it will create conflict with plate screws.
 If it is not used for levelling, 40x40 sits on baseplate, then it is still necessary to fix 40x40 to 30x30 by the means of SD screws.

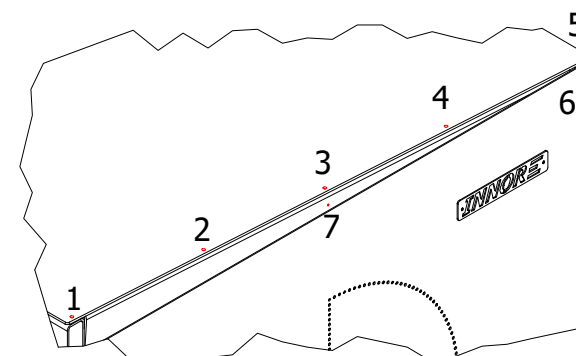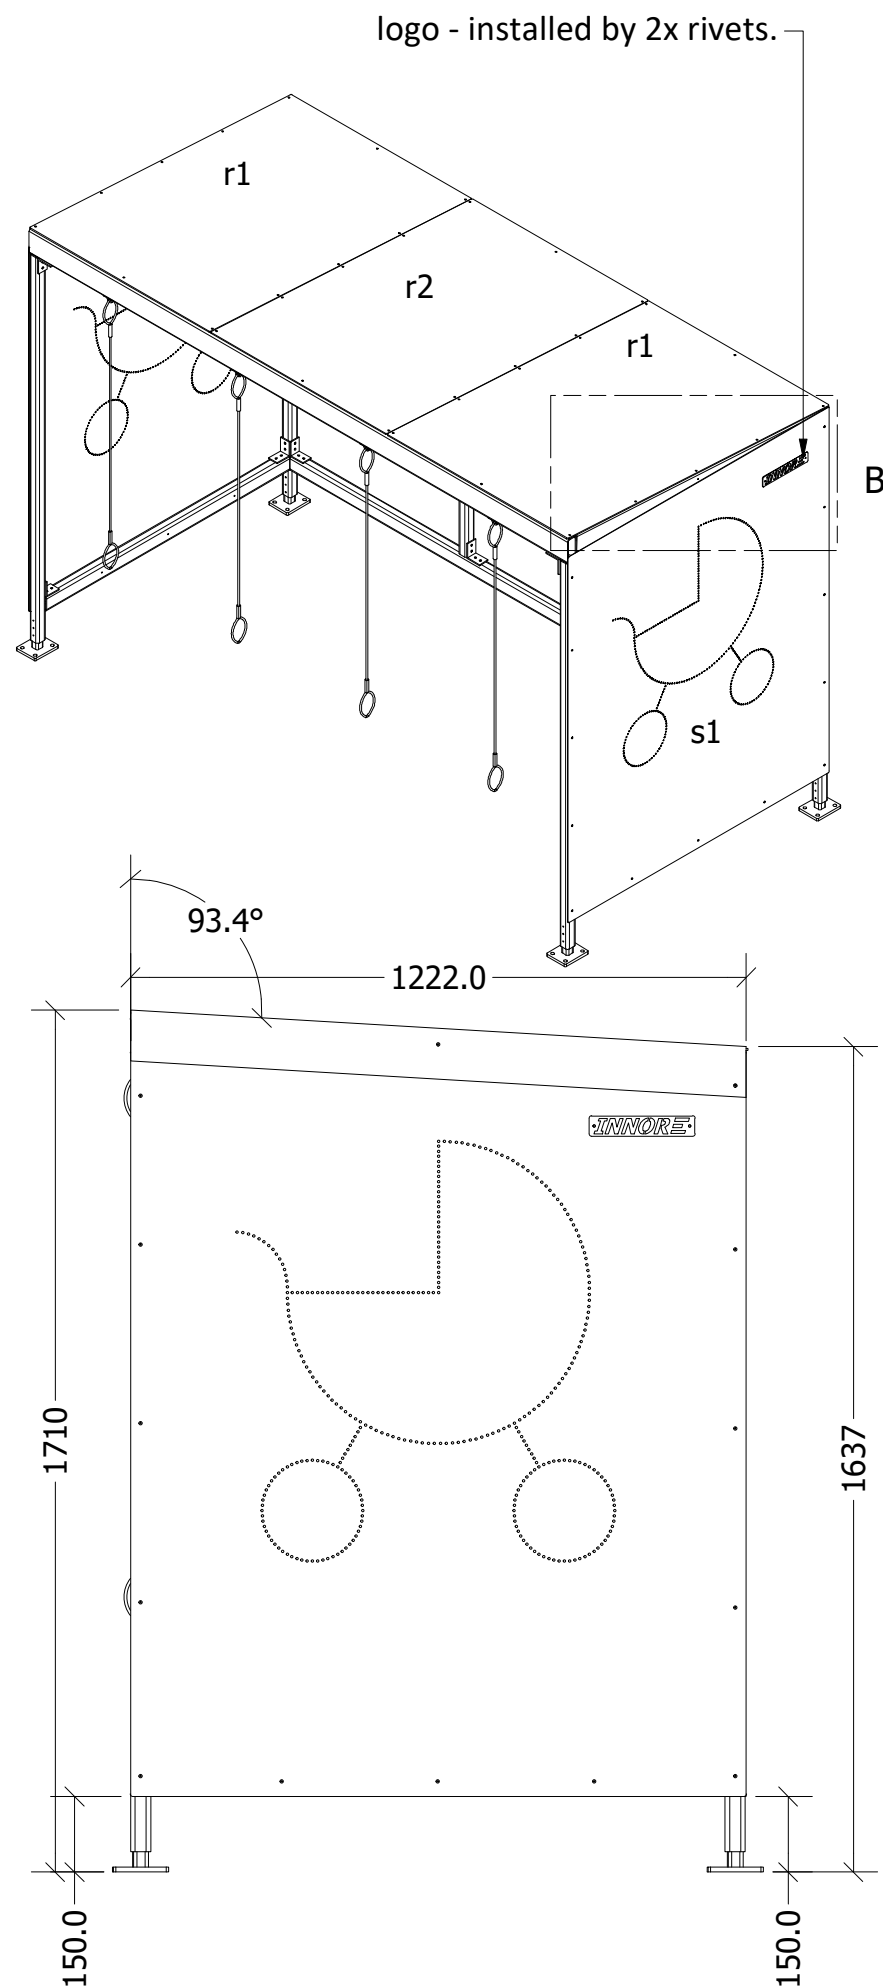


DETAIL B

NB! That goes for both sides.

DO NOT screw in these 7 screws at first, 100x30x3 bracket goes on top; screw goes through 2 plates to profile.

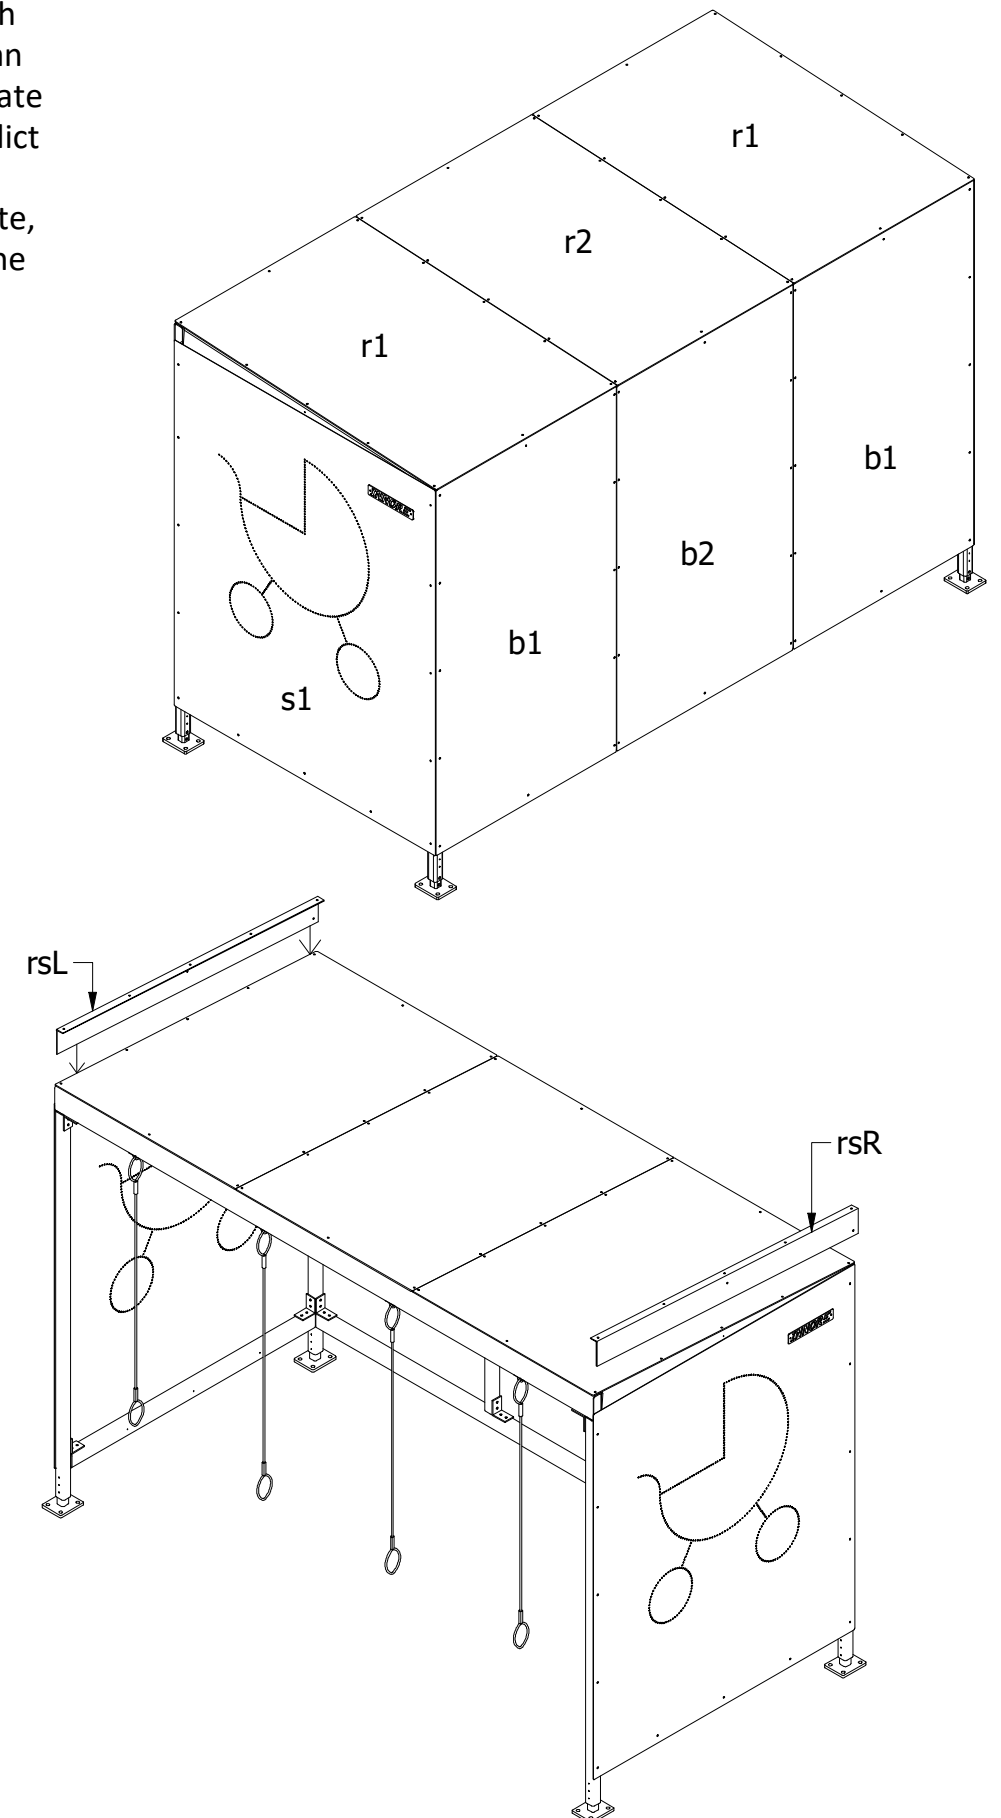


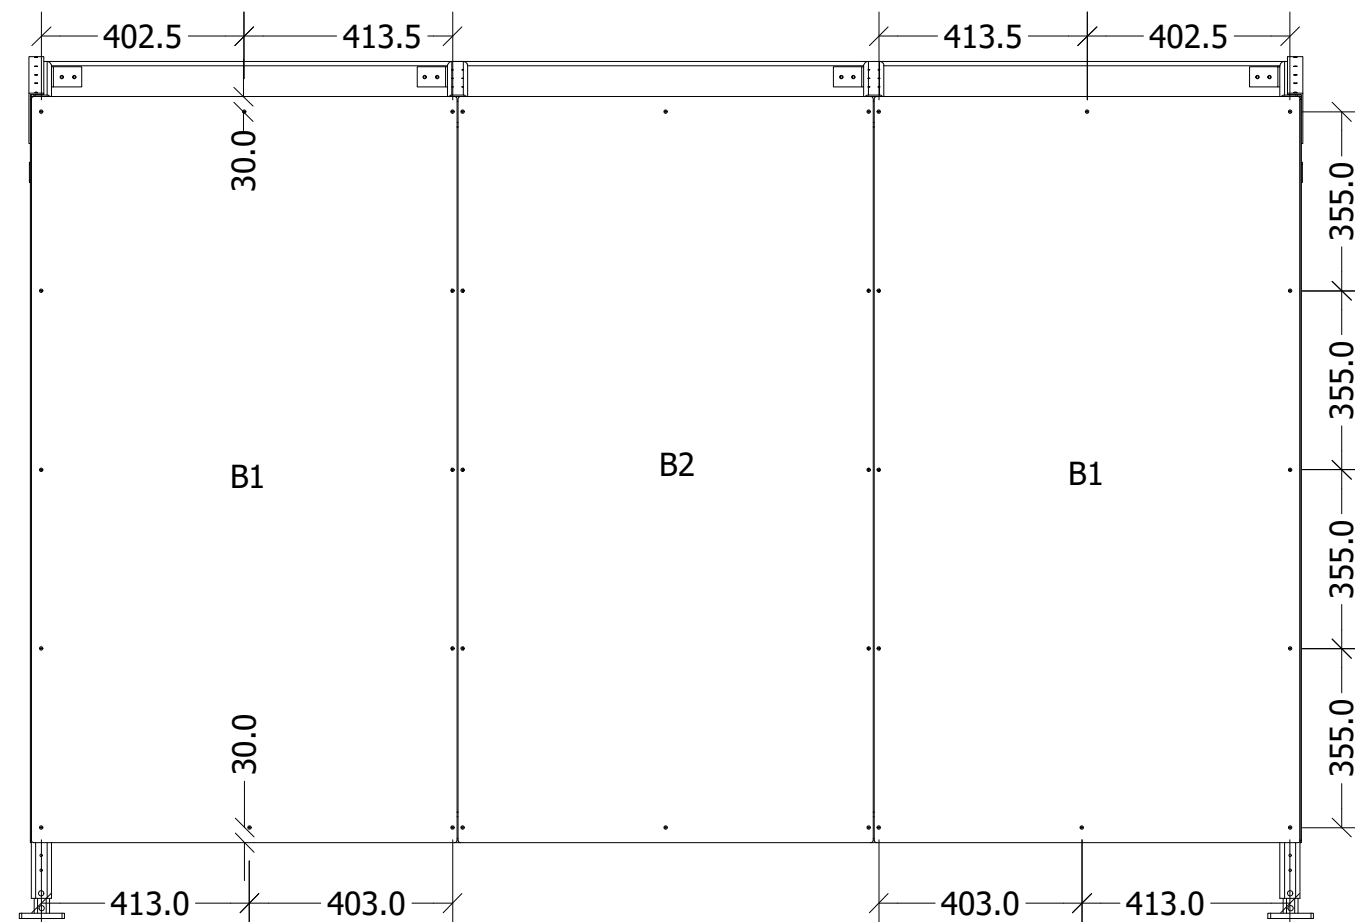

Back view
1:15


NB! Holes match only 1 way for B1 plates, for other side turn the plate 180 degrees to make it work.

Make sure you put R1 and R2 plates as 328.6 measurement goes towards 100x40x4 beam. The holes will match this way.

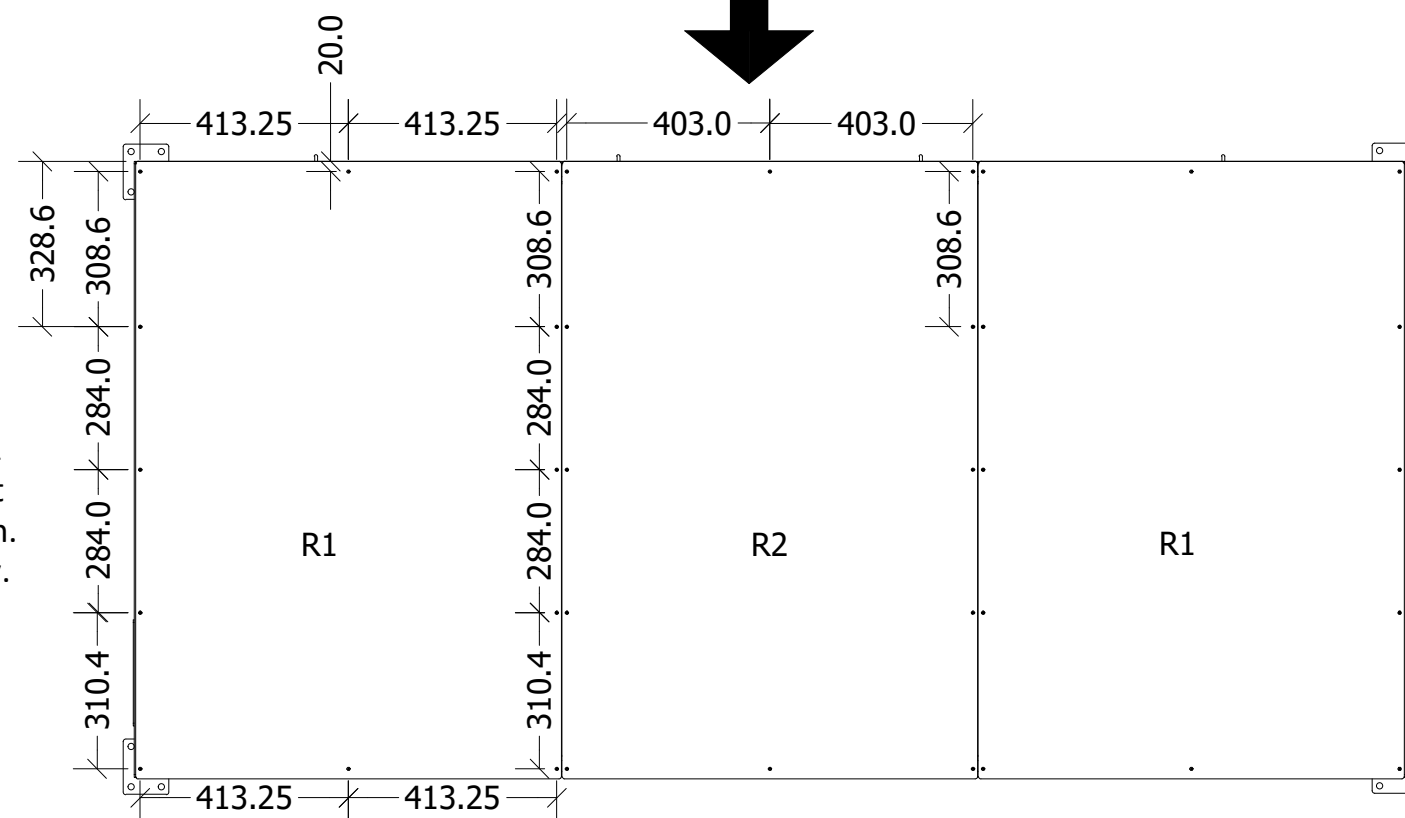


Top view
1:15

VIEW FROM FRONT

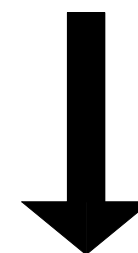

NB! At the back, roof plates are 3mm over the back plates.

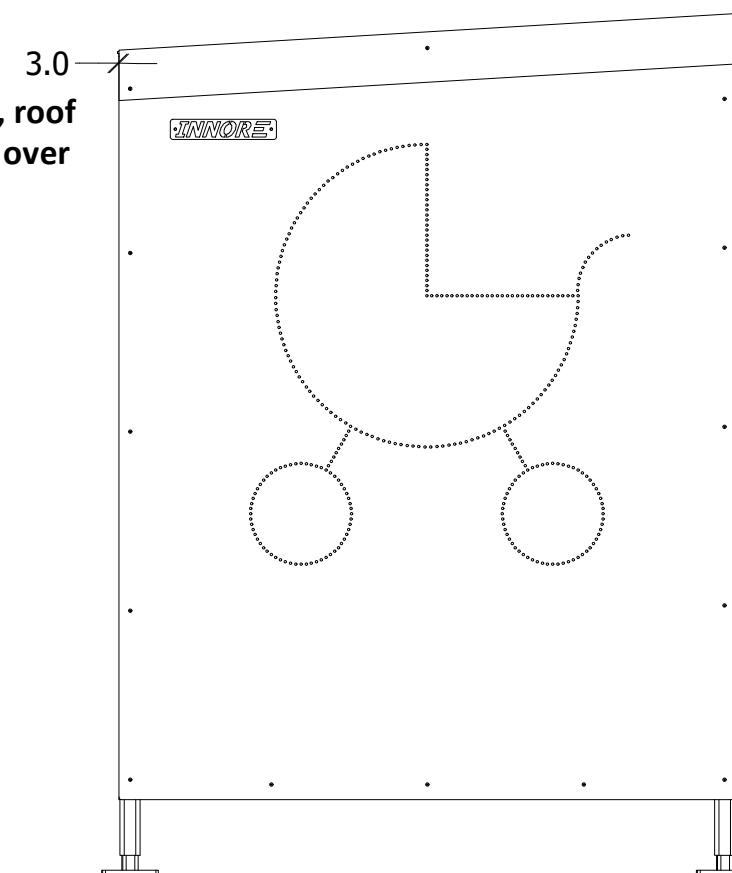

Side view
1:15